

- 15 When another person approaches, stop, release the hydraulic pressure and lower the pallet to the ground.
- 16 **DO NOT** operate the hydraulic release lever while moving a load.
- 17 **DO NOT** attempt repairs. Contact the Hire Company.