



## USING THE HUB OR GEAR PULLER:

- Ensure that all bolts fasteners or other attachments are removed from the hub.
- 10 **ALWAYS** ensure the hub or gear puller is in line with the spindle when tightening the centre bolt. **DO NOT** apply any side loads or forces.
  - 11 Strike the head of the centre bolt squarely with a soft-headed hammer to shock the hub or gears. **ENSURE** that safety goggles or glasses are worn during this operation.
  - 12 Be careful not to strike and damaged the threads on the puller.
  - 13 When the hub or gears become loose take care that the puller does not fall to the ground and cause damage.
  - 14 **ALWAYS** protect the thread mechanism of the puller by putting it in its container when not in use.
  - 15 Some pullers can be hydraulically operated and must not be struck under any circumstances.
  - 16 **DO NOT** attempt repairs. Contact the Hire Company