



Block, slab & stone splitters



These instructions must be read by the user before operating the splitter

- 1 The splitter must be operated correctly according to the manufacturer's or owner's operating instructions which are available on request if required.
- 2 **CHECK** that all persons and animals are clear of the work area.
- 3 Wear personal protective equipment; gloves and boots with steel toecaps are usually necessary.
- 4 Position the machine on firm level ground.
- 5 **CHECK** the splitter before use to ensure that all bolts are tight, especially those securing the blade.
- 6 **CHECK** that there is adequate workspace around the machine. **DO NOT** allow stone or concrete debris to accumulate in the work area.
- 7 Only use the cutting blade supplied with the machine.
- 8 Keep all parts of the body clear during the cutting or splitting operation.
- 9 When cutting a large block of stone or concrete it may be necessary to support the block to prevent it falling dangerously.
- 10 **DO NOT** attempt repairs. Contact the Hire Company.



CPA. 27/28 Newbury Street, Barbican, London EC1A 7HU.
Tel: 020 7796 3366. Fax: 020 7796 3399.
Email: enquiries@cpa.uk.net
Website: www.cpa.uk.net