



- 14 Fuel containers should be in good condition and leak proof.
- 15 **DO NOT** use the machine in a hazardous or explosive atmosphere, or where fuel has been spilt.
- 16 **DO NOT** use the machine in a trench, basement or other badly ventilated or enclosed area where exhaust fumes can sink into a basement or excavation.
- 17 If it has to be used in an enclosed area, ducting may be used to discharge exhaust fumes to a safe place.
- 18 Move the machine at least 10 metres from the fuelling point before starting engines.
- 19 **CHECK** that there are no combustible materials against the exhaust system. The exhaust and silencer get very hot.
- 20 In the event of a leak of fuel or oil developing, switch the engine off immediately.
- 21 **DO NOT** leave the machine unattended with the engine running.
- 22 **DO NOT** attempt repairs. Contact the Hire Company.