

- 13 **ENSURE** that all road signs are clean and upright.
- 14 Weight down signal heads and road signs in case of high winds.
- 15 Where traffic passes over the cable a Cable-Crossing protector (CCP) **MUST** be used.
- 16 **ENSURE** that there has been adequate provision made for pedestrians.
- 17 **ENSURE** that all signal cables are routed clear of the work area and pedestrians.
- 18 **CHECK** the signals at regular intervals and increase the timings if queues form at one end. Also, do not forget to adjust the timings if work area is extended.
- 19 **DO NOT** attempt repairs. Contact the Hire Company.

PORTABLE POWER SUPPLY

- 20 Before starting the engine, check oil, fuel levels and that the signals are switched off.
- 21 When the engine is running, **ENSURE** that the voltage selector switch (if fitted) is set to 110volts.
- 22 **DO NOT** smoke when refuelling. **NEVER** refuel whilst the engine is running.
- 23 Replace the fuel cap securely on the engine and the fuel container. Wipe up any spillage immediately.
- 24 **DO NOT** run the generator in a hazardous or explosive atmosphere, or where fuel has been split.
- 25 **CHECK** that there is no combustible material lying on or against the exhaust system. The exhaust pipe and silencer get very hot.
- 26 **DO NOT** top up coolant while the engine is running. Allow the radiator to cool before removing the radiator cap.